

FRELAN



HARDWARE

THE NAME OF QUALITY
ARCHITECTURAL
HARDWARE

FITTING INSTRUCTIONS



LEVER ON ROSE

www.frelan.co.uk

Fitting instructions

Levers on Rose

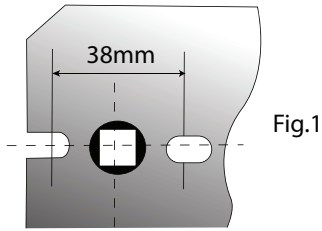


Fig.1

1 – Using the lock as a template mark and drill fixing holes to correspond to those in the lock/latch body. (Fig 1)

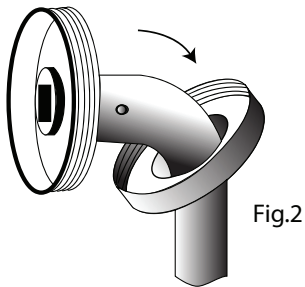


Fig.2

2 – Unscrew the cover roses from the levers to expose the fixing plates (Fig 2)

3 – Fit the spindle into the back of the fixing rose, on one side, making sure that the split/grooved side of the spindle lines up with the grub screw (Fig 3)
Tighten the grub screw fully

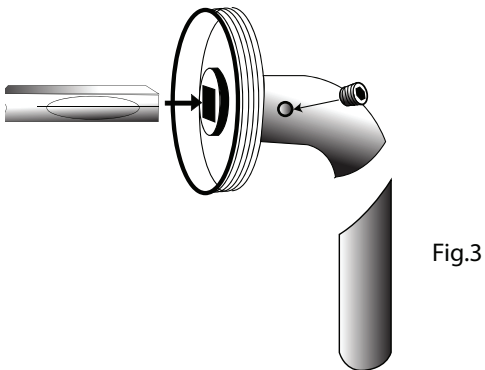


Fig.3

4 – Insert the fitted spindle and handle through the lock/latch, ensure you have the lever the correct way, making sure the rose is fitted flat against the face of the door. Fit the other lever on to the spindle on the opposite side of the door and keeping both fixing roses flat to the face of the door tighten the grub screw into the spindle. (Fig 4)

BOLT THROUGH FIXING

Fit the short bolt into the barrel and then insert through the fixing rose and the drilled holes. From the other side push the longer bolt through the fixing rose and screw in to the barrel and tighten (Fig 5)

FACE FIXING

We strongly recommend the use of the bolt through fixings as this will give a more secure fitting. However if your lock/latch does not allow for bolt through fixing or it is just not possible to use this method the levers can be fitted to the door face using the wood screws supplied.

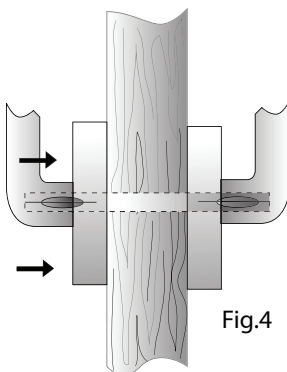


Fig.4

5 – Finally check both grub screws are tightened and replace the two cover roses.

CLEANING

Occasional wiping with a soft cloth and cleaning with a non abrasive wax polish.

Do not use any chemical or abrasive cleaners

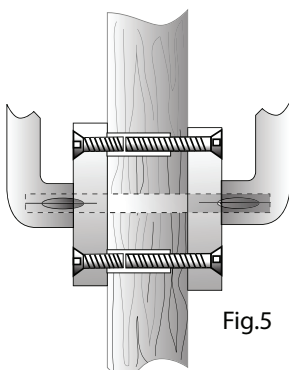


Fig.5